

IML-RESI PD-Series

Installing Bluetooth Printer

To install the Bluetooth printer, please perform the following steps:

Step 1

Keep pressing the right key until the green lamp lights up:



Step 2

Switch on the instrument and go to the system control menu:



Select menu item **Add-on modules**:



Check, if the additional module PRT is installed:




If **PRT** is not installed, select the menu item **Add** and enter the unlock key, which was provided with the Bluetooth printer.


Afterwards, select button **OK** to go back to the system control menu.

Step 3

Select menu item **Printer**:

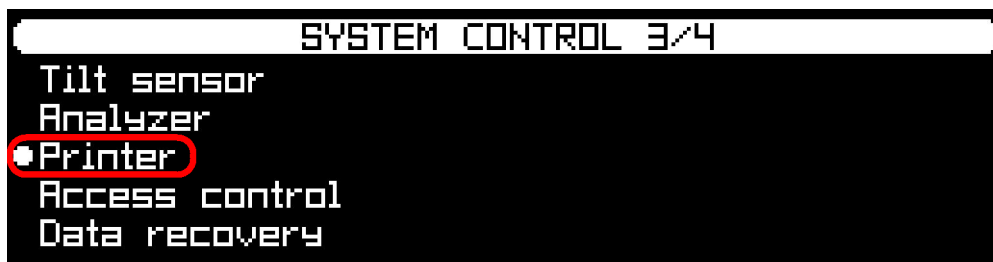

Select menu item **Add**:

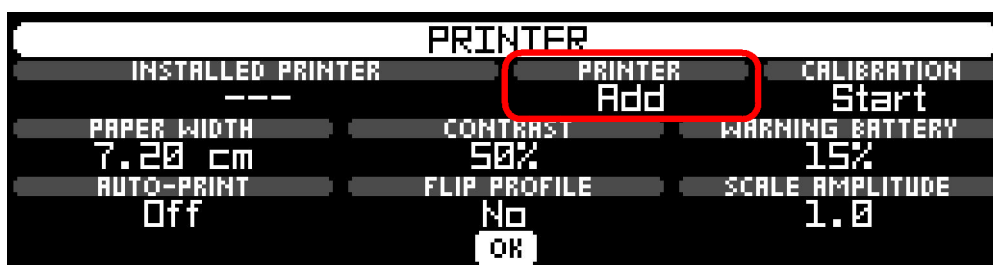

The printer will be searched and installed automatically. After successful installation, the printer's serial number appears at the menu item **INSTALLED PRINTER**. You can now leave this dialog and the system control menu.

Printer installation is now complete. The manual describes detailed the printer options and printer functions.